




# Maylong M-270 Battery Replacement

To show a user how to remove the battery from the device.

Written By: Adam Sanders





## Step 1 — Motherboard

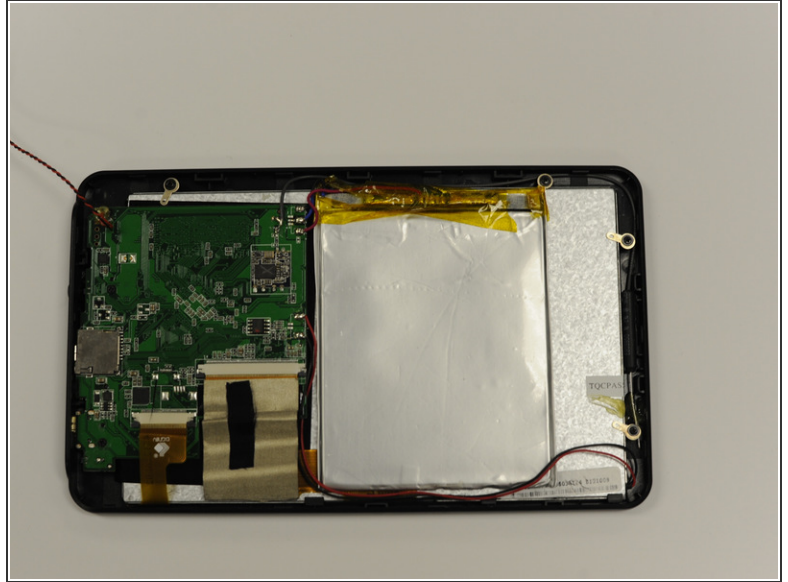

- Use the plastic opening tool to separate the back cover plate from the front.
- Insert the plastic opening tool in between the back plate cover and the top cover, then slide along edges to pry open.



## Step 2

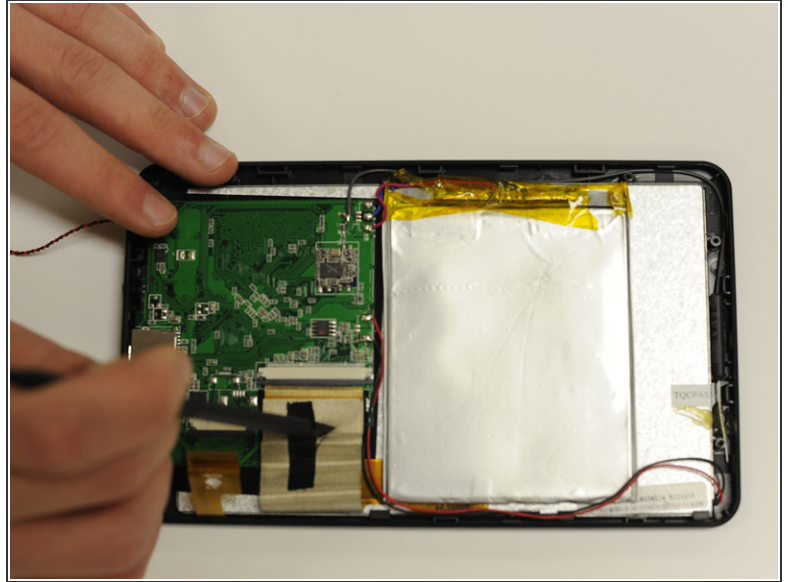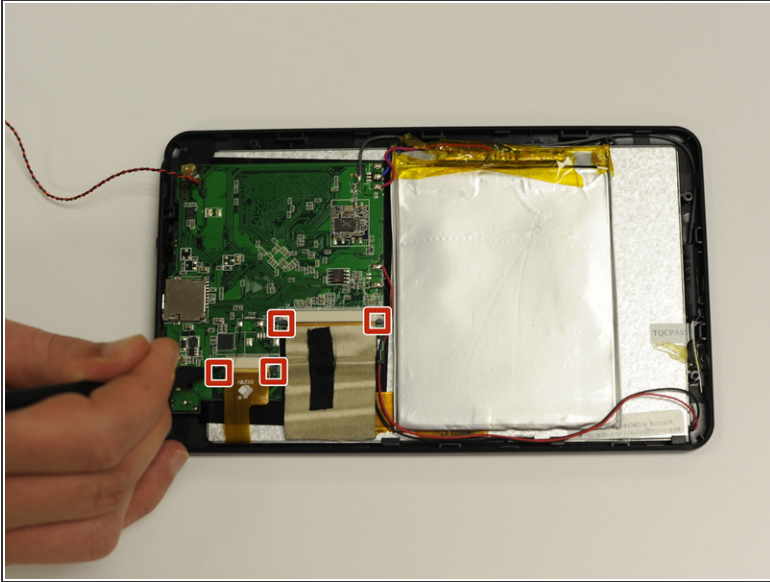

- Locate the two ribbons attached to the device's motherboard. <Add color to point out where they are>
- Flip the small black plastic catches down by using the small end of the spudger. <Add more pictures flipping it back if you can>
- Remove the ribbons by gently pulling them away from the motherboard. <Picture with it off>




## Step 3

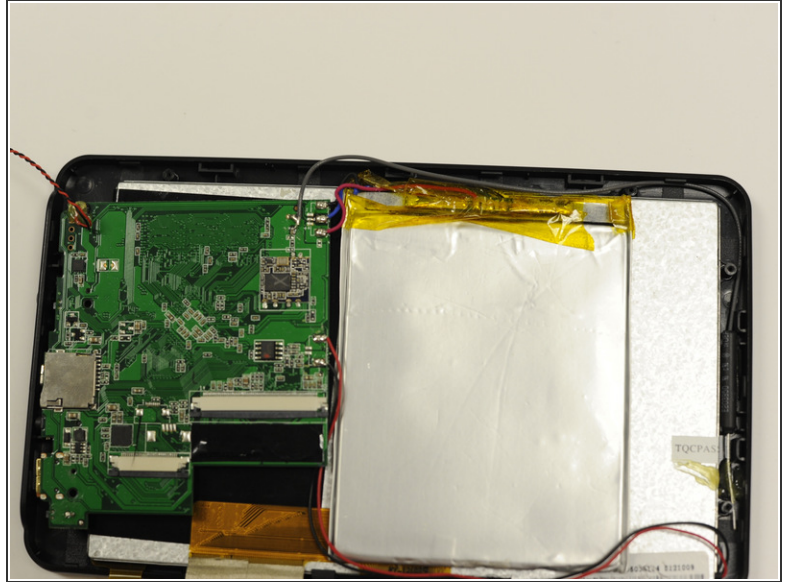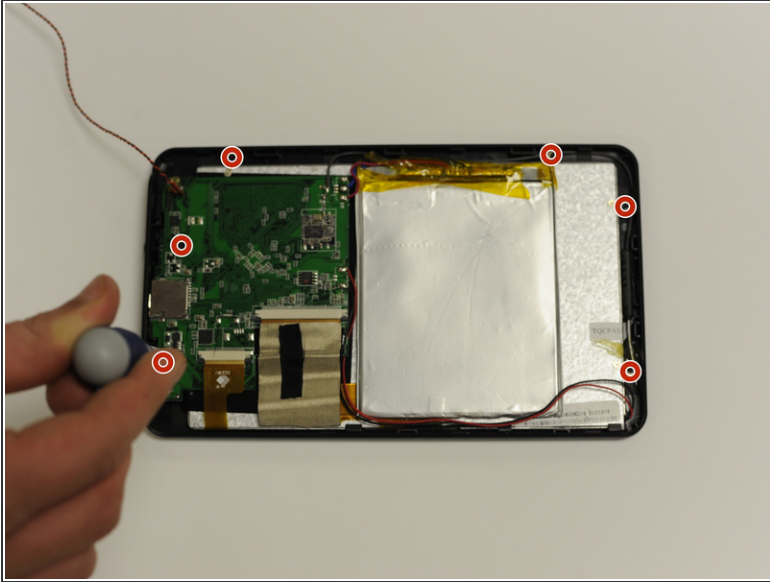

- Remove the two screws from the motherboard.
- Remove the four screws and metal holds from the edge of the device.

## Step 4

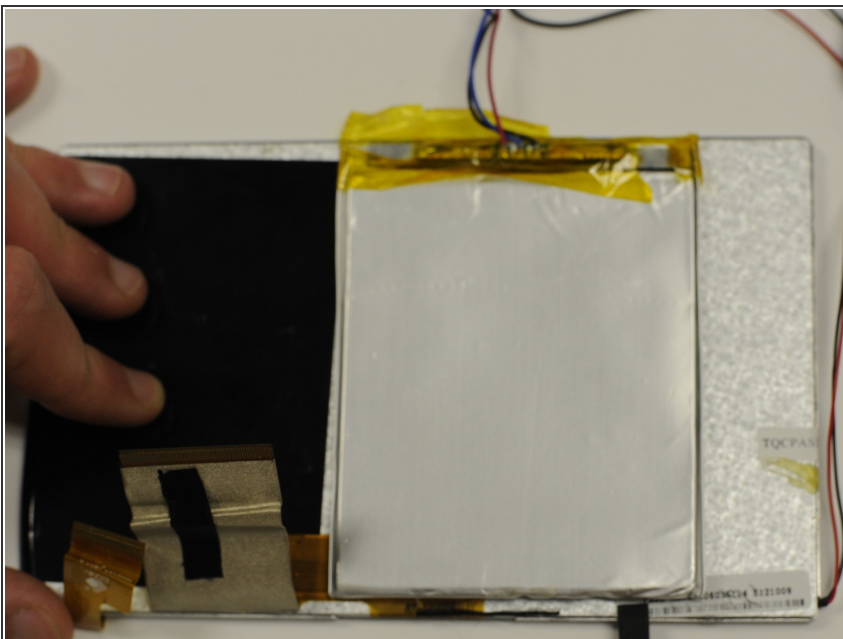


- Remove the motherboard by gently pulling it away from the bottom of the device.

## Step 5 — Battery



- Use this [MAYLONG Mobility M-270 Teardown Guide](#) to disassemble the device.

## Step 6

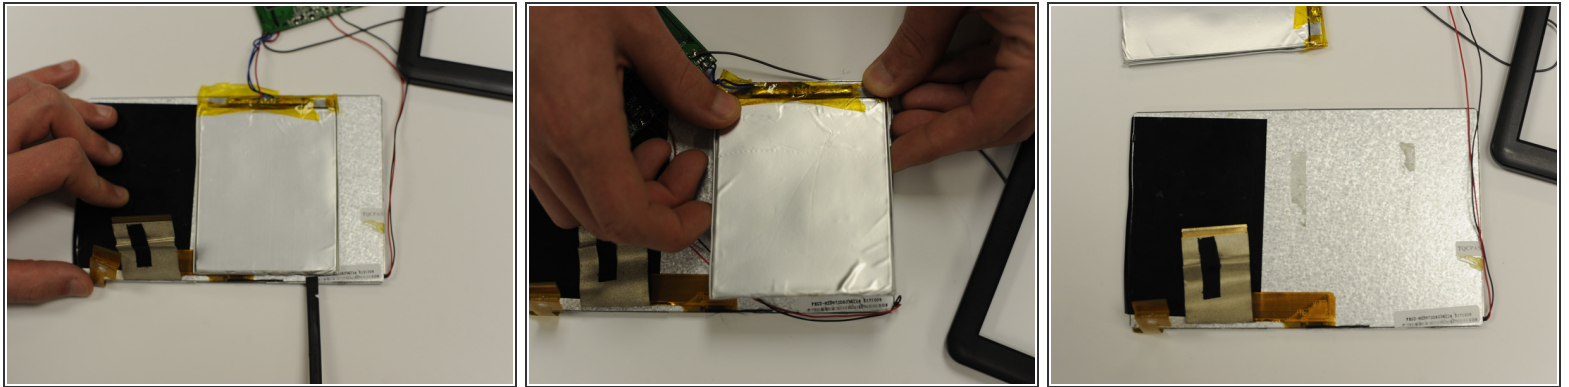

- Remove the battery by using the spudger to gently pry the battery away from metal case around the front screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-23 08:56:05 AM.